



## Panel Wand Control Fitting & Operating Instructions

# Panel Wand Control

## Fitting & Operating Instructions

Carefully unwrap the panel blind and brackets.

### Fitting the Brackets

The panel blind track uses top fix turnbuckle style brackets to secure the panel track. To change them into face fix, the top fix turnbuckle brackets are secured to a face fix bracket extender using a nut and bolt.

In a normal installation ensure that there is a 40mm (1 9/16") clearance for the bracket from any obstruction. e.g. a pelmet.

However if the track is a 4 track split draw corded configuration, the headrail must be turned around through 180 degrees and the brackets fixed 60mm (2 3/8") from any obstruction.

For a panel track up to 1 metre in length, attach two brackets fitted 50mm (2") from each end of the panel track. One fixing screw should be used in the centre hole of each bracket.

Any intermediate brackets should be spaced evenly between these and as a general rule:


Upto 1m = 2 brackets.

1m to 2m = 3 brackets.

2m to 3m = 4 brackets.

Over 3m = 5 brackets.

Mark the bracket hole positions before drilling and plugging if necessary. Use two screws for a face fix bracket and one screw in a top fix bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles.

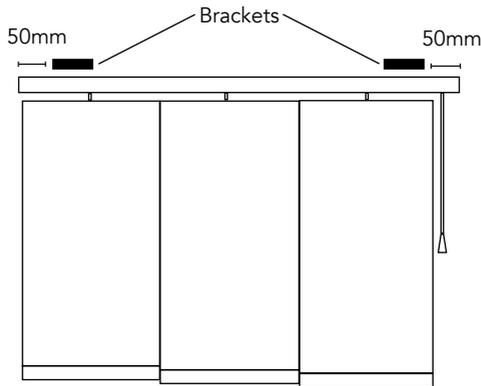

### Fitting the Track

Offer the panel track to the brackets, centralise the track and secure it by rotating the turnbuckle brackets.

### Removing the Track

First remove all the attached panels from the blind. Rotate each of the turnbuckle brackets in turn until the track can be safely removed.

### Fitting the Panels

The panels will have a strip of Velcro fitted along the top edge of the panel. This will be used to attach the panel to the track using the strip of Velcro running along the length of each panel runner.

Run the panel runners along the track to give easy access for the panels to attach to the runners. Starting at the back of the blind, attach the appropriate panel to the rearmost panel runner. Repeat this moving forward one panel runner at a time until all panels have been fitted.

For a split draw panel blind follow the above step starting on one side of the blind before moving to the other side of the blind.

Check that the panels line up across the bottom bar and adjust individual panels if this is not the case.

## Operating the blind

To close the panel blind, grip the wand and walk the wand across the window until the blind is in the closed position

To open the panel blind, grip the wand and walk the wand in the opposite direction until the panel blind is in the open position.

# Notes

# Notes

# Notes



Visit the Louvolite website to view the links to all of our assembly instructional videos  
[www.louvolite.com](http://www.louvolite.com)

Also find us on:

